

*acerpure*

# acerpure clean

無線吸塵器

User Manual

 
使用說明書

---

Model: SV552-10W

[www.acerpure.com](http://www.acerpure.com)

Copyright© 2021AcerPure Inc. All Rights Reserved.

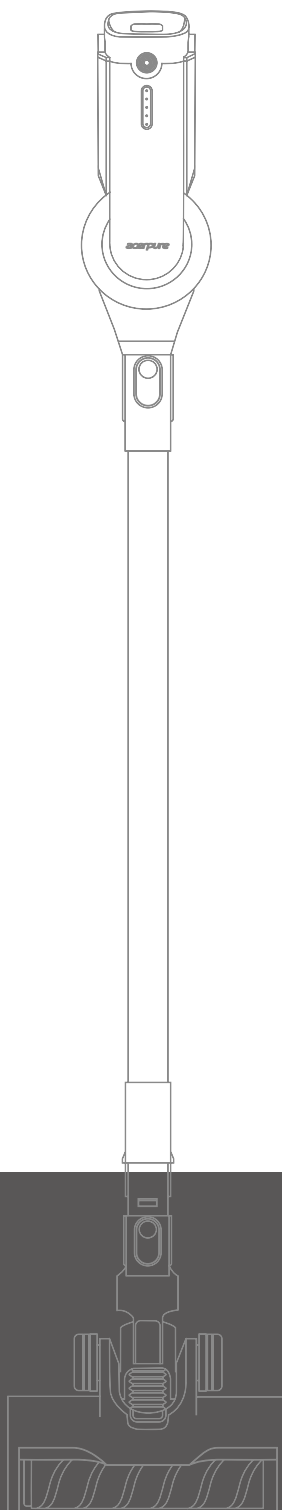





# 使用說明書

非常感謝您購買本產品，請務必詳閱本使用手冊，  
正確使用本產品，並妥善保存。

# 目錄

---

安全指示

05

電池說明與規格

06

產品配備

07

產品結構

08

電池安裝與充電

09

產品組裝與使用

10

清潔與保存

11

限用物質含有情況標示

12

尋求售後服務之前

12

產品規格與公司資訊

13

# 安全指示

⊘ 表示應「禁止」    ⚠ 表示需「注意」

⚠ 本產品為家庭、辦公室使用。 請勿用於其他用途。	⚠ 使用前，須先檢查電源線以及插頭是否有破損。 電源線請勿曲折、拉扯，以免接觸不良。
⚠ 使用前，請先檢查電壓是否與本產品電壓 標籤上之標示相符。	⚠ 拔掉插頭前，請先關閉電源。請勿以濕手觸 碰電源插頭，以避免觸電的危險。
⚠ 孩童應受監護，以確保孩童不嬉玩或靠在電 器上。在兒童旁邊或附近使用時，務必特別 注意。	⊘ 為防止傾斜，直立式安裝應使用提供的支架 固定螺絲、固定塊固定在牆壁上。在壁掛式 安裝中，充電站應使用提供的牆壁固定螺絲 緊緊固定在牆壁上，且僅在連接到混凝土或 類似堅硬表面時才使用固定螺絲。並請注意 不要讓機器懸空。
⊘ 為避免觸電或火災，請勿在可能接觸到水、 雨水或高濕度環境中安裝、充電或存放本機 器，並嚴禁在未組裝好本產品的情況下使 用，請在通風良好的位置安裝、充電或存放 本機器。	⊘ 本產品不預期供生理、感知、心智能力、 經驗或知識不足之使用者(包含孩童)使 用，除非在對其負有安全責任的人員之 監護或指導下安全使用。
⊘ 請勿於本產品上噴灑揮發劑、 殺蟲劑等液體。	⊘ 請勿在低於5°C或超過38°C的環境中使用或 存放本機器。
⚠ 若長時間不使用本產品，請將電源插頭拔 下。尤其是在打雷、閃電、地震、火災等 緊急異常情況時，請立即關閉電源，並拔 起插頭。	⚠ 本產品只需做一般外部性清潔保養，請勿 使用表面粗糙的清洗工具，也請勿直接用 水沖洗。
⚠ 如果產品不慎浸泡在水中，請立即停止使 用，並聯繫客服人員。	⚠ 若您發現任何異常的現象，如噪音、煙霧 或是異味，請立即關閉電源，拔下插頭並 聯繫客服人員。
⚠ 未經本公司授權之維修人員，不得自行 修理或改造本產品。若電源線損壞時， 也須由已授權之維修人員加以更換， 以避免危險。	⚠ 客服聯絡方式，請見本說明書最後的公司 資訊。

# 電池說明與規格

⊘ 表示應「禁止」    ⚠ 表示需「注意」

⚠ 若長時間不使用本電器，請拔下電源線並取出電池。	⚠ 取出電池前，應切斷電器電源。
⚠ 當電池無法再充電時，請更換特別設計的電池組。	⚠ 報廢電池或電器前，請從本電器中取出電池並安全的丟棄電池以及電器。
⚠ 切勿在其他機器中使用本機器的電池、轉接器和充電器。	⊘ 請勿使用改裝或損壞的電池。
⊘ 當不使用電池組時，應與可能導致兩極通路的金屬物體保持距離，例如迴紋針、硬幣、鑰匙、釘子、螺絲或其他小金屬物體。	⊘ 在濫用條件下，液體可能從電池漏出。如果發生這種情況，應避免接觸。如果意外接觸，請用清水沖洗。若液體不慎接觸到眼睛，請務必尋求醫療幫助。
⚠ 為避免意外啟動電器。在連上電池組、拿起或攜帶產品之前，請確保開關處於關閉位置。	⚠ 在進行任何調整、更換配件、清潔、維修、或儲存電器之前，請拆下電器上的電池組。
⚠ 處理或處置電池時，請遵守當地的所有法規和條例。棄置本電器時，請遵守棄置充電式鋰電池的規定。	⚠ 有關更換電池的方法，請參閱電池充電的說明。
⚠ 僅能使用本電器提供之電源供應器(僅限使用型號：ZD024M300080US)對電池充電。 電池型號：RF072LMG	⊘ 充電端子不可短路。

## 電池型號

 
提供一顆或兩顆電池，電池數量視購買的型號而有所不同。

- 型號名稱：PF072LMG
- 類型：充電式鋰離子電池
- 額定電壓：DC 25.2 V<sub>nom</sub>
- 容量：2500mAh/ 63Wh


# 產品配備與結構

## 產品配備


### 〔主機配件〕

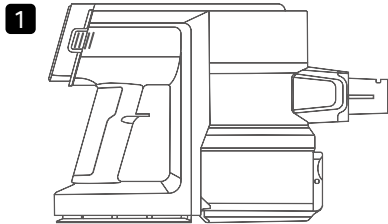

手持吸塵器主機

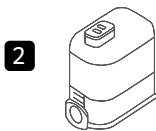 


充電式鋰離子電池

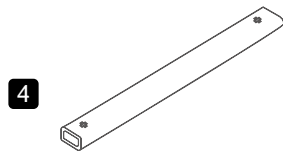 

延長管



 電源供應器

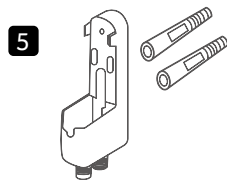


壁掛架+固定螺絲




說明書+保證卡


### 〔吸頭刷〕

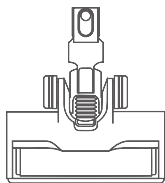 

電動渦輪刷吸頭

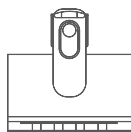 

電動除蟎刷頭

 


隙縫清潔吸頭



二合一吸頭


# 產品結構

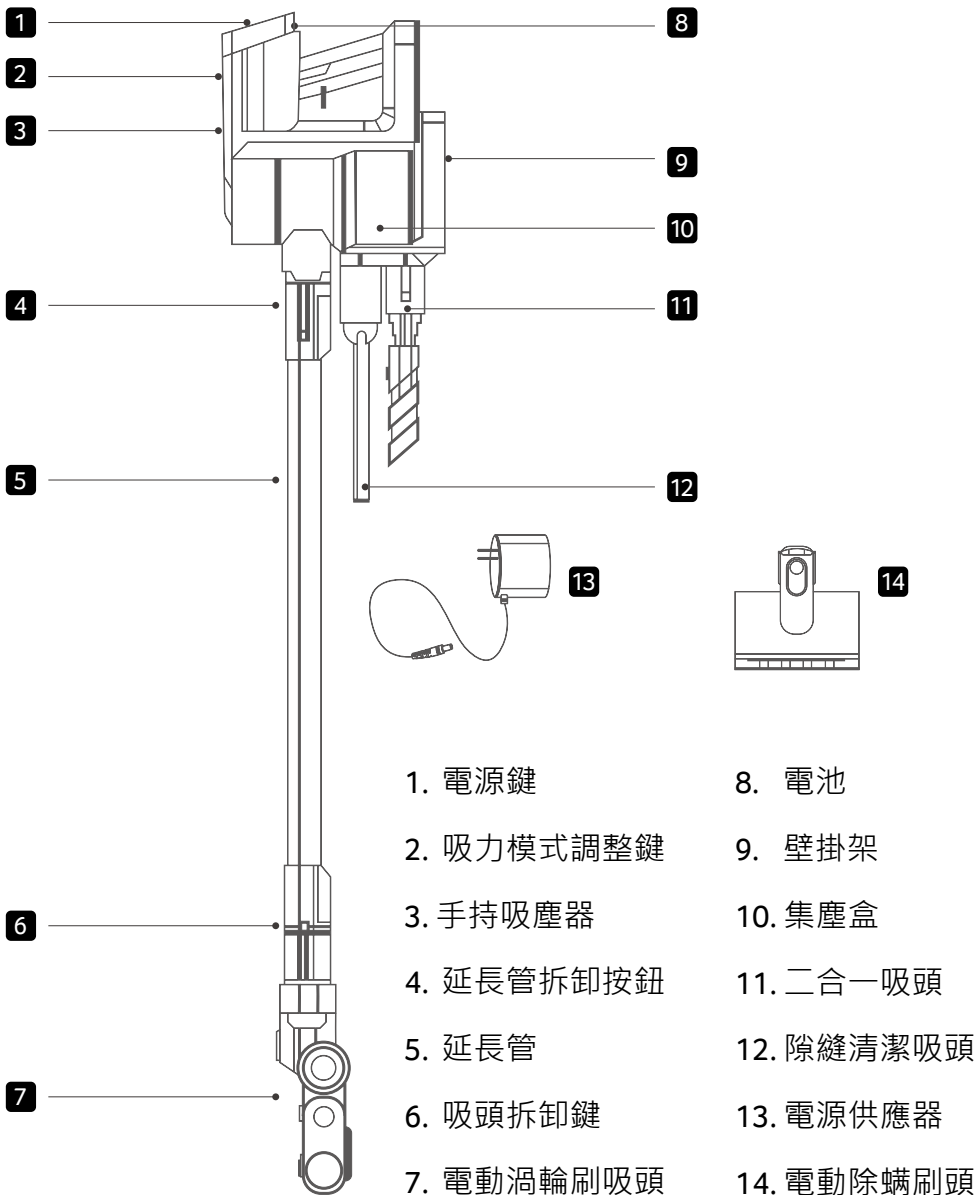 

# 電池安裝與充電

## 電池安裝

 
請按下電池的拆卸按鈕並將其放入手持吸塵器的頂部。正確安裝後，請確實將電池卡入到位。

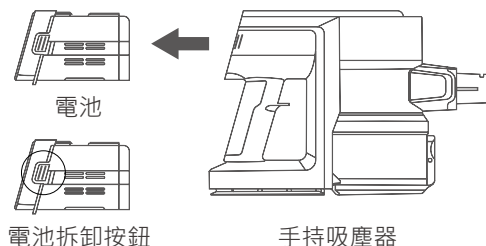

## 電量指示燈

1. 待您開機後，本產品共有5個指示燈，以長亮方式顯示當前電池的電量。
2. 當本產品的5個指示燈閃爍時，請為本產品充電。充電過程中，指示燈會一直顯示閃爍狀態。待產品充滿電後，5個指示燈會恢復常亮狀態，且於完成充電5分鐘後關閉指示燈，進入睡眠模式。

 
❗ 請注意：當電池電量低於3%時，本產品將自動關機。

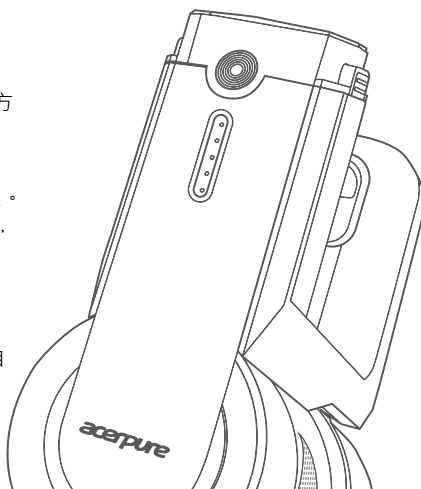

## 電池充電

充電口位於電池上。請將充電器插入電源插座，即可為機器充電；您也可以取出電池，單獨為電池充電。

 
❗ 請注意：充電時請勿使用吸塵器。

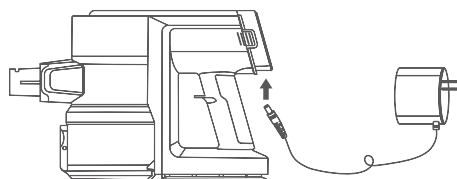

# 產品組裝與使用


## 延長管組裝

 請將延長管插入手持吸塵器主機中，並確認其卡入到位。

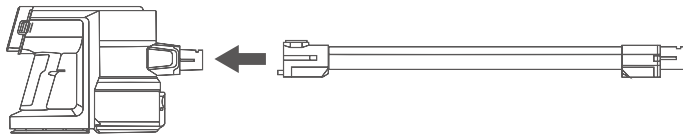

## 電動渦輪刷吸頭組裝

 
將電動渦輪刷吸頭插入延長管中，並確認其卡入到位，按下吸頭拆卸鍵即可移除管子。

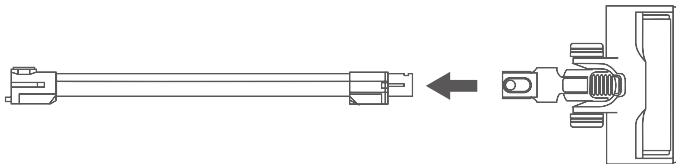

## 其他吸頭組裝


### 手持輕便版組裝

 請將二合一吸頭/隙縫清淨吸頭/電動除蟎刷頭插入至手持吸塵器主機中，並確認其卡入到位。

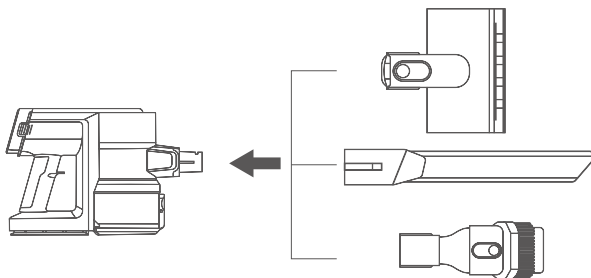

### 手持延長版組裝

 您也可將二合一吸頭/隙縫清淨吸頭/電動除蟎刷頭插入至延長管，再結合至手持吸塵器主機中，並確認其卡入到位。

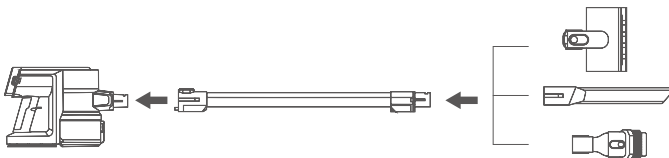

## 產品使用

使用前請確保吸塵器電池有充足電量。首次使用時請先為產品充電3小時。



### 電源開啟/關閉

您可以開始或停止使用本產品。



 
### 吸力模式調整鍵

本產品共有三段吸塵速度模式 (極強、標準與節能模式)，可依需求調配速度，以達最佳清潔效果。

# 清潔與保存

## 集塵盒清潔


請關閉吸塵器電源，按下集塵盒開啟按鈕，即可一鍵清空集塵盒。

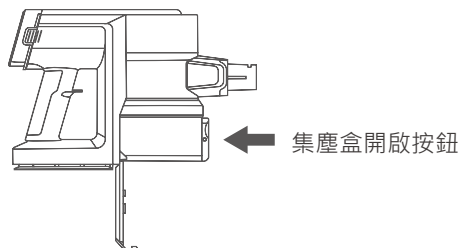

## 濾網清潔


將集塵杯中的灰塵清空後，即可將濾網取出。集塵杯的底部亦可拆卸，您可以使用隨附的清潔刷清洗金屬濾網和海綿過濾網。

 ❗ 請注意：在濾網必須完全乾燥後，才能重新安裝回本產品中。

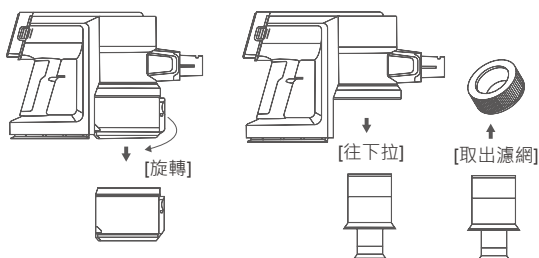

## 電動渦輪刷、電動除蟎刷頭清潔

 
將吸塵器電源關閉後，您可使用硬幣或其他工具轉開並解鎖滾刷鎖，即可取下電動渦輪刷或電動除蟎刷頭進行清潔。

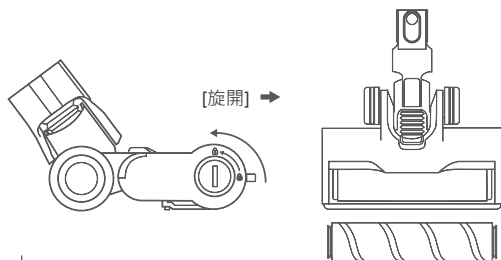

## 吸塵器保存

使用包裝隨附的螺絲將壁掛架安裝在牆上，並將本產品插入掛鉤中。二合一吸頭和隙縫清淨吸頭可以存放在壁掛架上，如右圖所示。

 ❗ 請注意不可將產品懸空。

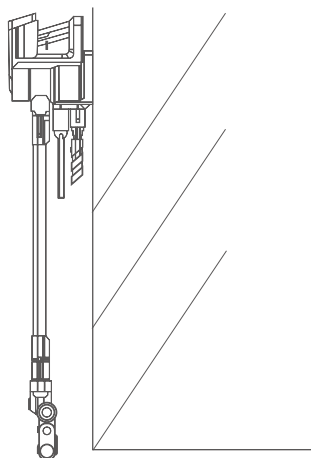

# 限用物質含有情況標示

設備名稱：無線吸塵器			型號(型式)：SV552-10W			
單元	限用物質及其化學符號					
	鉛 (Pb)	汞 (Hg)	鎘 (Cd)	六價鉻 (Cr <sup>6+</sup> )	多溴聯苯 (PBB)	多溴二苯醚 (PBDE)
電源供應器	○	○	○	○	○	○
馬達組件	○	○	○	○	○	○
PCB基板	-	○	○	○	○	○
配線線材	○	○	○	○	○	○
塑膠部件	○	○	○	○	○	○
金屬部件	-	○	○	○	○	○

- 1. “超出0.1 wt %”及“超出0.01 wt %”係指限用物質之百分比含量超出百分比含量基準值。
- 2. “○”係指該項限用物質之百分比含量未超出百分比含量基準值。
- 3. “-”係指該項限用物質為排除項目。

# 尋求售後服務之前

若發現產品有故障的問題，在連絡客服之前，請先檢查以下事項。

問題	可能原因	解決方式
產品無法開啟	產品電量是否不足?	請確認本產品電量指示燈，若電量不足請進行充電。
	產品的吸頭是否被異物堵住?	請移除吸頭的異物。
產品的吸力比以往弱	集塵盒或濾網是否有過多灰塵?	請進行集塵盒與濾網的清潔。
	是否有毛髮或其他異味纏繞在吸頭上?	請進行吸頭的清潔。
運轉時的噪音太大或發出異常聲音時	吸頭或延長管是否有異物堵塞?	請移除堵塞之異物。
吸頭不轉動或LED燈不亮時	是否有毛髮或其他異味纏繞在吸頭上?	請進行吸頭的清潔。
	是否有某些部分未完善的安裝?	請確認各組裝部分已妥善安裝。
電池指示燈持續快速地閃爍	是否使用非本包裝隨附的電源供應器?	請確保充電過程中都是使用acerpure提供給本產品的電源供應器。

# 規格

產品規格	
產品名稱	無線吸塵器
產品型號	SV552-10W
額定電壓	25.2V <sup>---</sup>
額定功率	400W
淨 重	1.5 KG
產品尺寸	210 x 250 x 1150mm
產 地	中國

電源供應器規格(僅限使用型號：ZD024M300080US)	
額定電壓 / 額定頻率	100 – 240 V ~ 50/60 Hz
輸出電壓	DC30V <sup>---</sup>

# 公司資訊

*acerpure*

www.acerpure.com  
台灣客服專線：0800-520-555





# User Manual


Thank you very much for purchasing this product.  
Please make sure to read this manual carefully, use  
this product correctly, and store it properly.


# Table of Contents







---

Safety Instructions	05
Battery Description and Specifications	06
Product Accessories	07
Product Structure	08
Battery Installation and Charging	09
Product Assembly and Usage	10
Cleaning and Preservation	11
Before Seeking After-sales Service	12
Product Specifications and Company Information	13


# Safety Instructions


 means it is "prohibited"















 means "caution" is required

<p> This product is for family and office use. Do not use it for other purposes.</p>	<p> Check whether the power cable and plug are damaged before use. Do not bend or tug on the power cable in order to prevent poor connection.</p>
<p> Before using the product, please check whether the voltage is consistent with the indicated voltage on the label of this product.</p>	<p> Switch off the power before unplugging the power plug. Do not touch the power plug with wet hands in order to prevent the danger of electric shock.</p>
<p> Children should be supervised to ensure they do not play with or lean against electrical appliances. Please be extra careful when using it nearby children.</p>	<p> To prevent it from tilting over, the vertical installation of the stand should be fixed to the wall using the provided fixation screws and blocks. The wall mount installation of the charging station should be secured to the wall using the provided wall fixation screws, and they can only be used when fixing the charging station to concrete or a similarly hard surface. Please be careful not to let the device hang in the air.</p>
<p> To avoid electric shock or fire, do not install, charge or store this product in an environment where it may be exposed to water, rain or high humidity. It is strictly prohibited to use this product without having it assembled. Please install and charge/store it in a well-ventilated location.</p>	<p> This product is not intended for use by users (including children) with physiological, perceptual, mental ability, experience or knowledge deficiencies unless used safely under the supervision or guidance of the person responsible for their safeties.</p>
<p> Do not spray liquids such as volatile agents or insecticides on this product.</p>	<p> Do not use or store this device in an environment below 5°C or above 38°C.</p>
<p> Unplug the power plug if this product is not used for an extended period of time. Especially when there are emergencies such as thunder and lightning, earthquakes or fires, please switch off the power and unplug the power plug immediately.</p>	<p> This product only requires external cleaning and maintenance; do not clean the surface with rough cleaning tools, and do not rinse it with water directly.</p>
<p> If the product was accidentally immersed in water, please stop using it immediately and contact customer service personnel.</p>	<p> If you discovered any abnormalities such as noises, smoke or strange odors, please switch off the power immediately, unplug the power plug and contact customer service personnel.</p>
<p> This product may not be repaired or modified by repairers who are not authorized by our company. If the power cable is damaged, it must also be replaced by authorized repair personnel in order to avoid danger.</p>	<p> Please refer to the company information at the end of this manual on how to contact customer service.</p>

# Battery Description and Specifications

 means it is “prohibited”

 means “caution” is required

 If the appliance will not be used for a long time, unplug the power cord and remove the battery.	 Before removing the battery, the appliance should be disconnected from the power supply.
 When the battery cannot be recharged, replace it with a specially designed battery pack.	 Before disposing of batteries or appliances, remove the batteries from the appliance and safely dispose of the batteries and appliances.
 Do not use this device’s batteries, adapters, and chargers on other devices.	 Do not use modified or damaged batteries.
 When the battery pack is not in use, keep it away from metal objects that could cause bipolar passages such as paper clips, coins, keys, nails, screws, or other small metal objects.	 Fluids may leak from the battery under abusive conditions. Contact should be avoided if this happens. In case of accidental contact, rinse the contacted location with clean water. Always seek medical help if liquid comes into contact with the eyes.
 To avoid accidental activation of the appliance, make sure that the power switch is in the “Off” position before attaching the battery pack, picking up, or carrying the product.	 Remove the battery pack from the appliance before making any adjustments, replacing accessories, cleaning, servicing, or storing the appliance.
 Observe all local laws and regulations when handling or disposing batteries. When disposing of this appliance, please observe the regulations for the disposal of rechargeable lithium batteries.	 For information on how to replace the battery, please see the instructions for charging the battery.
 The battery can only be charged with the power supply provided by this appliance. Battery model: PF072LMG	 The charging terminals cannot be short-circuited.

## Battery model

Available with one or two batteries, the number of batteries varies depending on the model purchased.

 
- Model name: PF072LMG
- Type: Rechargeable Lithium-ion Battery
- Rated voltage: DC 25.2 V–
- Capacity: 2500mAh/ 63Wh



# Product Configuration and Structure


## Product Accessories

### [ Device Accessories ]

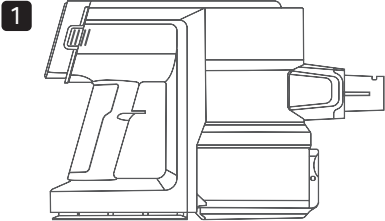


Handheld Vacuum Cleaner

 2




Rechargeable Lithium-ion Battery

 4

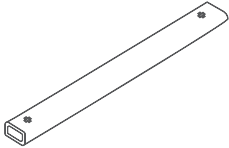


Extension Tube

 3

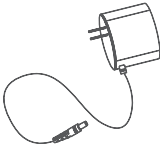

Power Supply

 5

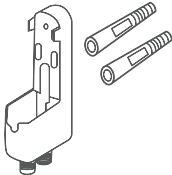


Wall Mount +  
Fixation Screws

6




User Manual +  
Warranty Card

### [ Tip Brush ]

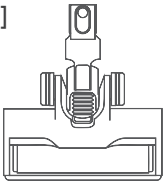 

Main Cleaner

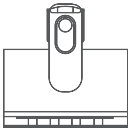 

Mite Turbo Brush




Crevice Tool



2 in 1 Brush




# Product Structure

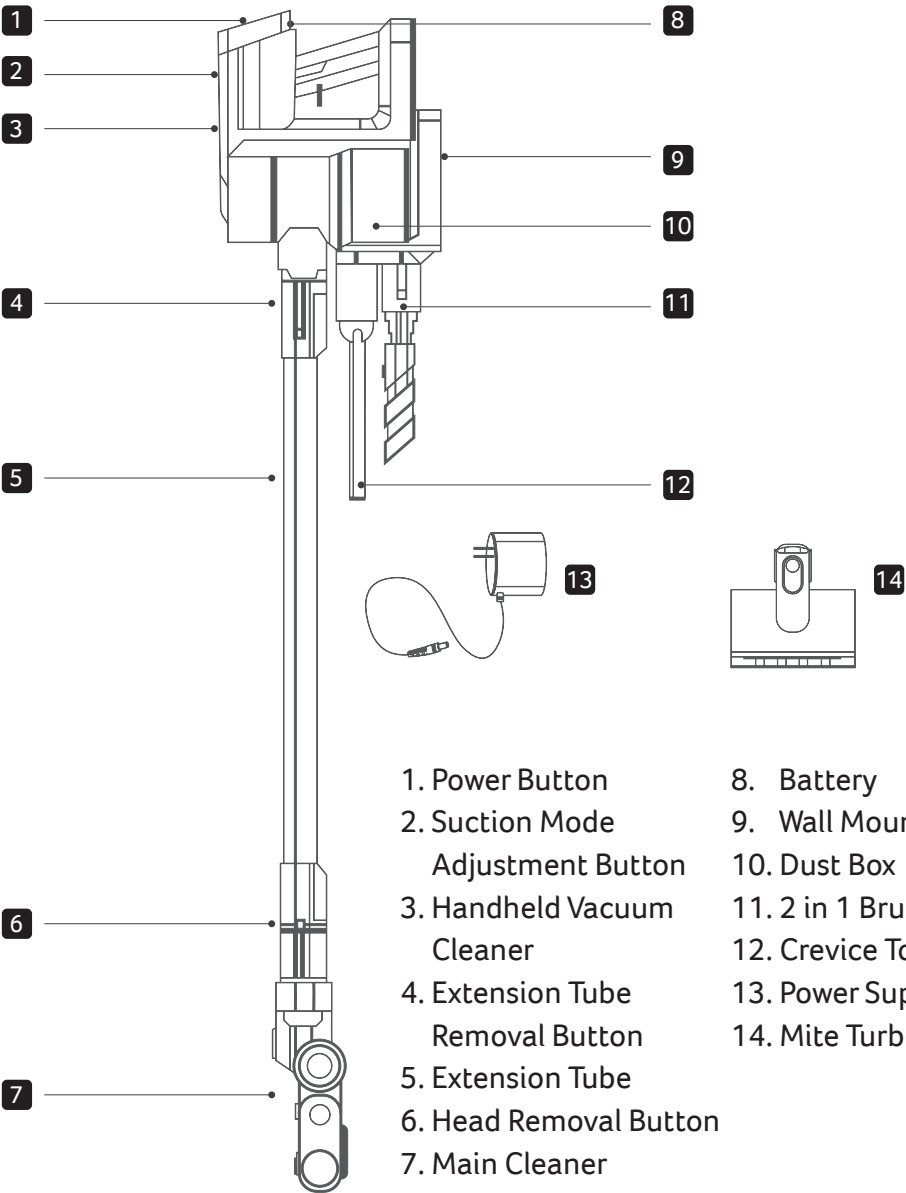 

# Battery Installation and Charging

## Battery Installation

 
Please press the battery removal button, and place it inside the top of the handheld vacuum cleaner. Once the battery has been correctly installed, make sure to snap the battery back into place.

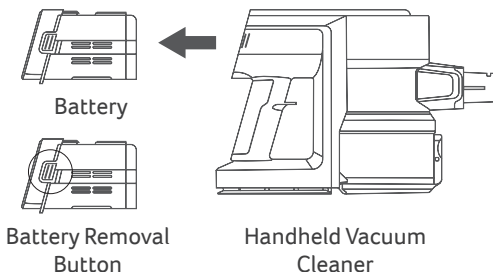

## Battery Indicator

1. After you turn on the product, there are a total of 5 indicator lights that are always on and will display the current battery level.
2. When the 5 indicator lights of this product are flashing, please charge this product. During the charging process, all five indicator lights will keep flashing. After the product is fully charged, the five indicators will return to their normal state of being on, and the indicator will be turned off after 5 minutes of charging to enter Sleep Mode.

 
⚠ Please note that this product will automatically shut down when the battery level drops below 3%.

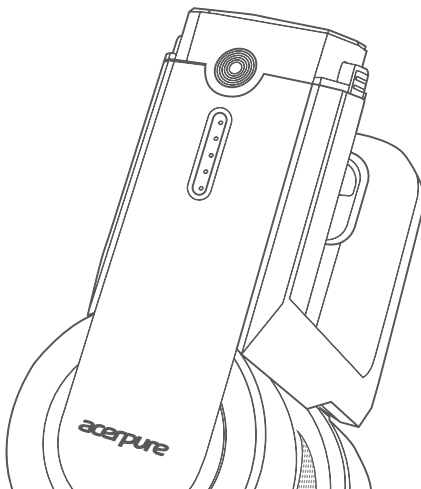

## Battery Charging

The charging port is located on the battery. Plug the charger into a power outlet to charge the device, or remove the battery and charge the battery separately.

 
⚠ Note: Do not use the vacuum cleaner while charging.

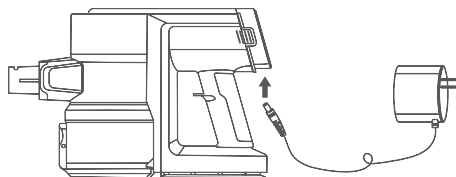

# Product Assembly and Usage


## Extension Tube Assembly

 Install the extension tube onto the vacuum cleaner, and make sure it clicks into place.

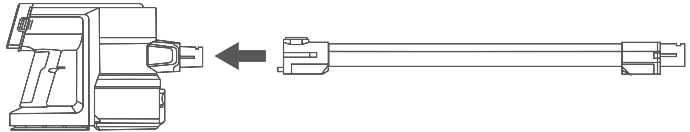

## Main Cleaner Assembly

 
Install the Main Cleaner onto the extension tube, and make sure it snaps into place. Press the head removal button to remove the vacuum head.

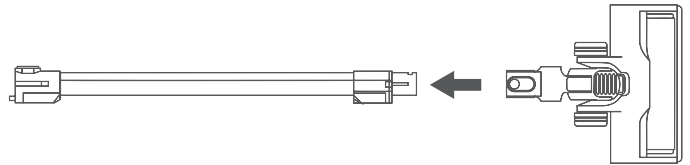

## Other Vacuum Head Assembly


### Handheld Lightweight Version Assembly

 Please install the 2 in 1 Brush/Crevise Tool/Mite Turbo Brush onto the Handheld Vacuum Cleaner, and confirm that it clicks into place.

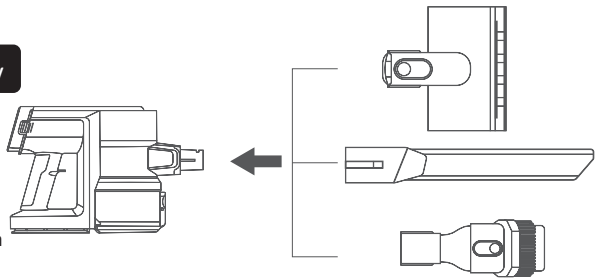

### Handheld Extended Version Assembly

 You can also install the 2 in 1 Brush/Crevise Tool/Mite Turbo Brush onto the extension tube, and then combine it with the Handheld Vacuum Cleaner, and make sure that it clicks into place.

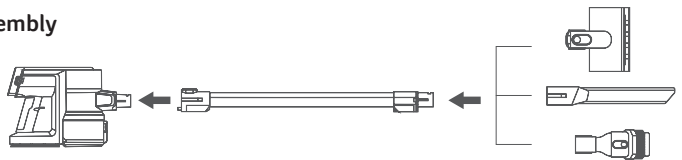

## Product Use

Please make sure that the vacuum cleaner is fully charged before use. Please charge the product for 3 hours before using it for the first time.



### Power ON/OFF

You can press it to start or stop using this product .



 
### Suction Mode Adjustment Button

This product has three vacuum suction modes (Turbo, Daily, Energy-saving modes), which can be adjusted according to your needs to achieve the best cleaning effect.

# Cleaning and Preservation


## Dust Box Cleaning

Please turn off the vacuum cleaner's power and press the dust box opening button to empty the dust box with one click.

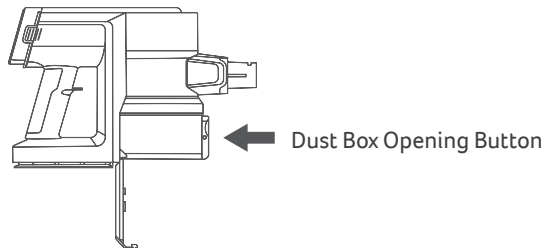

## Filter Cleaning

 
The filter can be removed after the dust in the dust box has been emptied. The bottom of the Dust Box is also removable, and you can use the included cleaning brush to clean the metal and sponge filters.

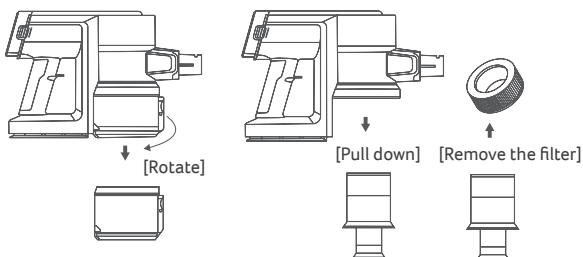

**!** PLEASE NOTE: The filter must be completely dry before it is reinstalled onto the product.

## Main Cleaner & Mite Turbo Brush Cleaning

 
After turning the vacuum cleaner off, you can use a coin or other tool to turn and unlock and remove the Main Cleaner & Mite Turbo Brush for cleaning.

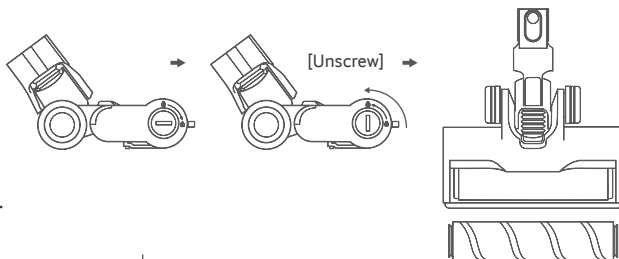

## Vacuum Cleaner Storage

Attach the wall mount to the wall using the screws provided in the package, and insert the product onto the hooks. The 2 in 1 Brush and Crevice Tool can be stored on the wall mount, as shown in the photo to the right.

 **!** Please note that the product cannot be left hanging in the air.

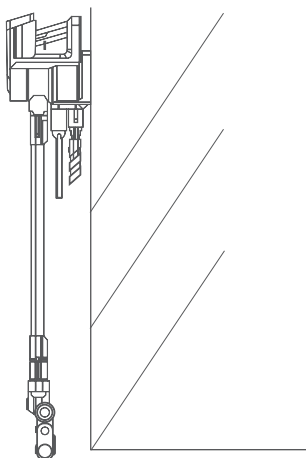

# Before Seeking After-sales Service

If you discovered that the product malfunctioned, please check the following items before contacting customer service.

Problem	Possible Cause	Solution
Product does not turn on	Whether the power reserve is insufficient?	Please confirm by checking the battery indicator light on this product, and charge the product if the battery is low.
	Is the vacuum head of the product blocked by a foreign matter?	Please remove the foreign matter from the head.
The vacuuming power of the product is weaker than before	Is there too much dust in the dust box or filter?	Please clean the dust box and filter.
	Is there hair or other odors stuck in the vacuum head?	Please clean the vacuum head.
When there's too much noise during operation or when the product makes abnormal sounds	Is the vacuum head or extension tube blocked with foreign matter?	Please remove the foreign matter that is blocking the vacuum head or extension tube.
When the vacuum head doesn't rotate or the LED light doesn't light up	Is there hair or other odors stuck in the vacuum head?	Please clean the vacuum head.
	Were some parts not properly installed?	Make sure that each assembly part is properly installed.
The battery light keeps blinking rapidly	Are you using a power supply not supplied with this package?	Please make sure to use the power supply provided by acerpure for this product when charging.



# Specifications

---

Product Specifications	
Product name	Cordless Vacuum Cleaner
Product model	SV552-10W
Rated voltage	25.2V <sup>==</sup>
Rated power	400W
Net weight	1.5 KG
Product dimensions	210 x 250 x 1150mm
Place of origin	China

Power Supply Specifications	
Rated voltage/Rated frequency	100 – 240 V ~ 50/60 Hz
Output voltage	DC30V <sup>==</sup>



# Company Information

---

*acerpure*

www.acerpure.com



# NOTE

---



# NOTE

---

*acerpure*